





**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**

Automatic anti-dazzle rearview mirror

Accessories Part No.	Date	Instruction Part No.	Replaces
12 756 338 12 772 924 12 772 927 12 777 848 12 777 851 12 803 374 12 804 662 32 000 575	Oct 06	32 025 810	32 025 810 Nov 05

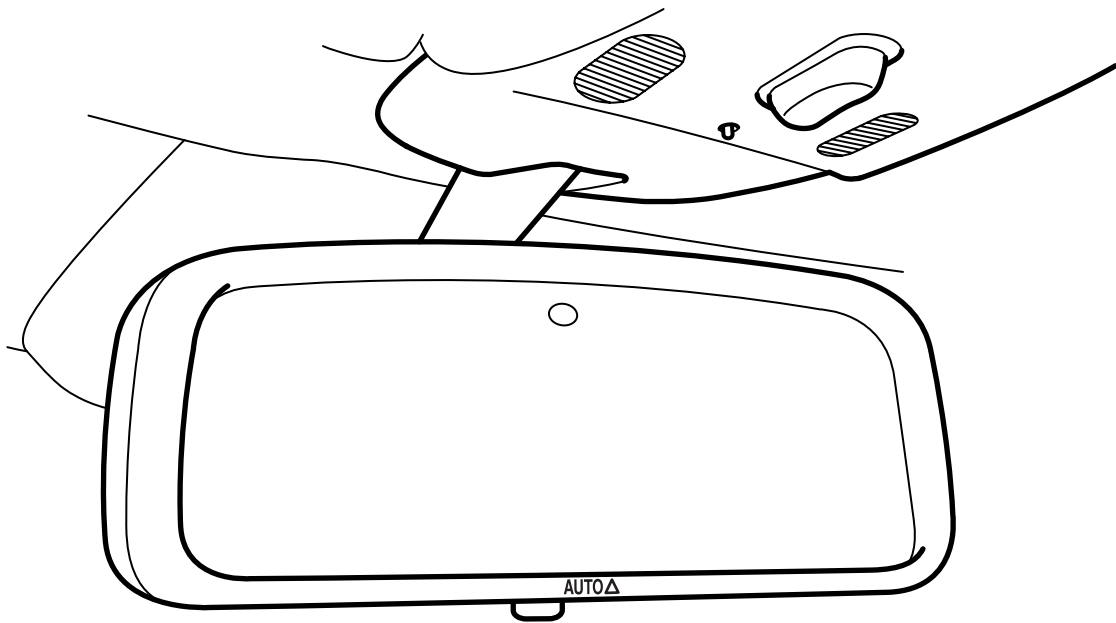

F980A142

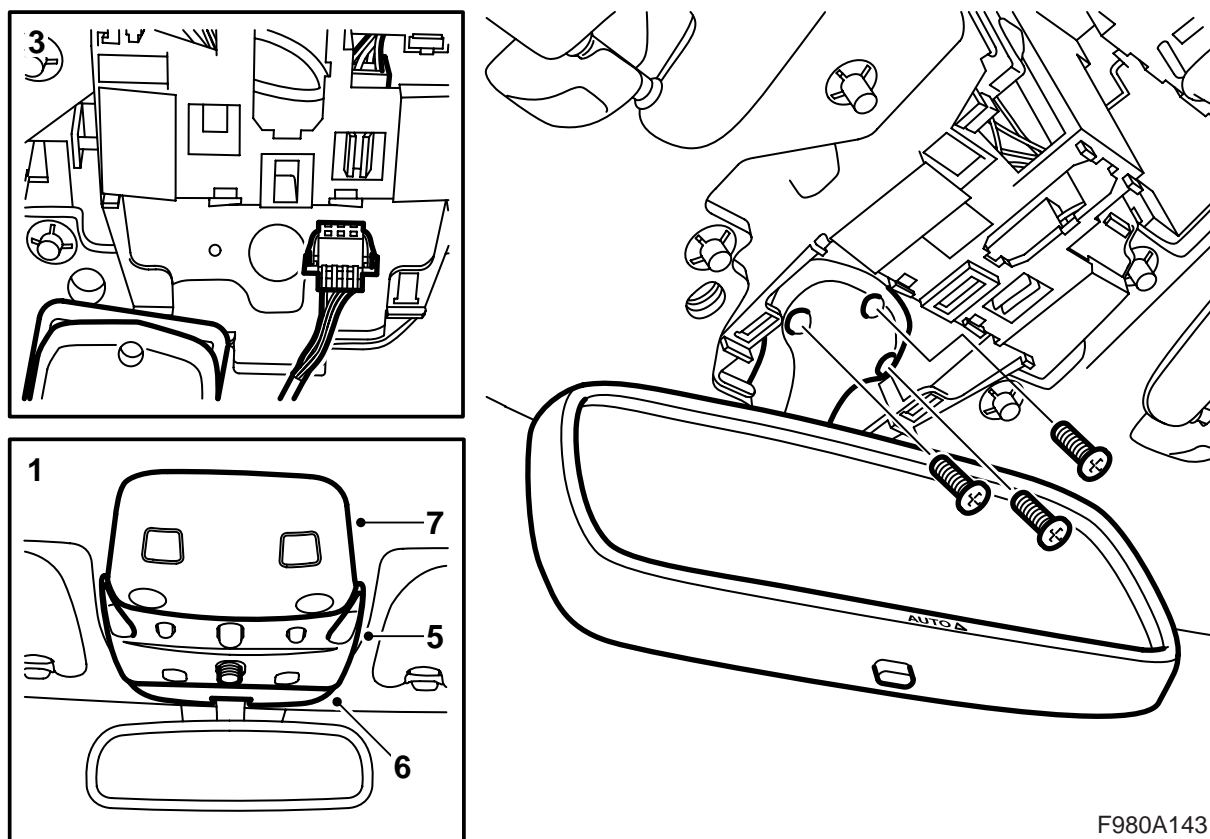



F980A143

- 1 Remove the rear, centre and front sections of the roof lighting cover. Tool 82 93 474 is recommended.
- 2 Remove the rearview mirror.
- 3 Plug in the connector.
- 4 Run the wiring harness to the left of the rearview mirror mounting and fit the rearview mirror.

⚠ WARNING

Make sure the wiring harness is not pinched. Incorrect fitting can damage the cables and cause short-circuits/fire.

- 5 Fit the centre section of the roof lighting cover.
- 6 Fit the front section of the roof lighting cover.
- 7 Fit the rear section of the roof lighting cover.
- 8 Check the function of the mirror and the lamps.
- 9 **Rearview mirror with compass:** Calibrate the compass; see page 3. If necessary, change the compass zone; see page 3.

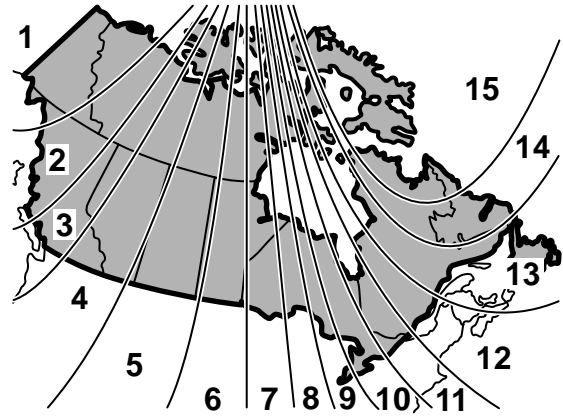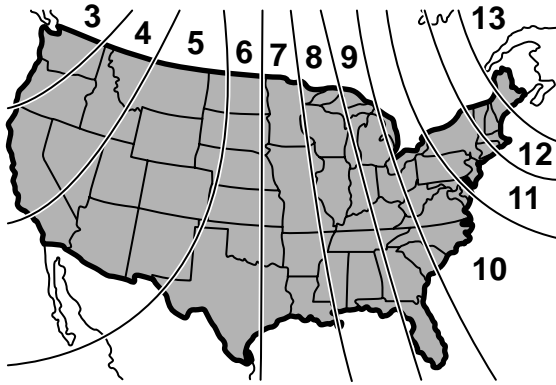

D980A352

User instructions

The rearview mirror has two sensors; one facing the front and the other facing the rear. When the front-facing sensor detects that it is dark outside, the system will be activated so that any bright light falling from behind will gradually darken the rearview mirror to reduce the brightness. As the bright light subsides, the mirror will gradually return to normal.

Automatic anti-dazzle can be switched off using the button under the rearview mirror. For other questions, refer to the Owner's Manual.

Calibration/Programming

Rearview mirror with compass: Calibrate the compass by holding the "AUTO" button depressed until "CAL" and a compass point are shown in the compass window. Release the button. Slowly drive the car in a circle until "CAL" disappears. The compass is now calibrated. For other questions, refer to the Owner's Manual.

Rearview mirror with compass: Change the compass zone by holding the "AUTO" button depressed until "ZONE" and a compass point are shown in the compass window. Release the button. You can now change the compass zone using the "AUTO" button (see illustration for compass zone options). Release the "AUTO" button once the correct compass zone has been selected. Once "ZONE" disappears, the compass zone is stored. For other questions, refer to the Owner's Manual.

Rearview mirror with garage door remote control: For programming, see the Owner's Manual.