




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS  
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**


**Saab 9-3 M03-**

**Pedal raising kit**

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
12 787 136 12 787 137 12 791 272 12 791 273	9:52-02	Mar 02	12 788 447	

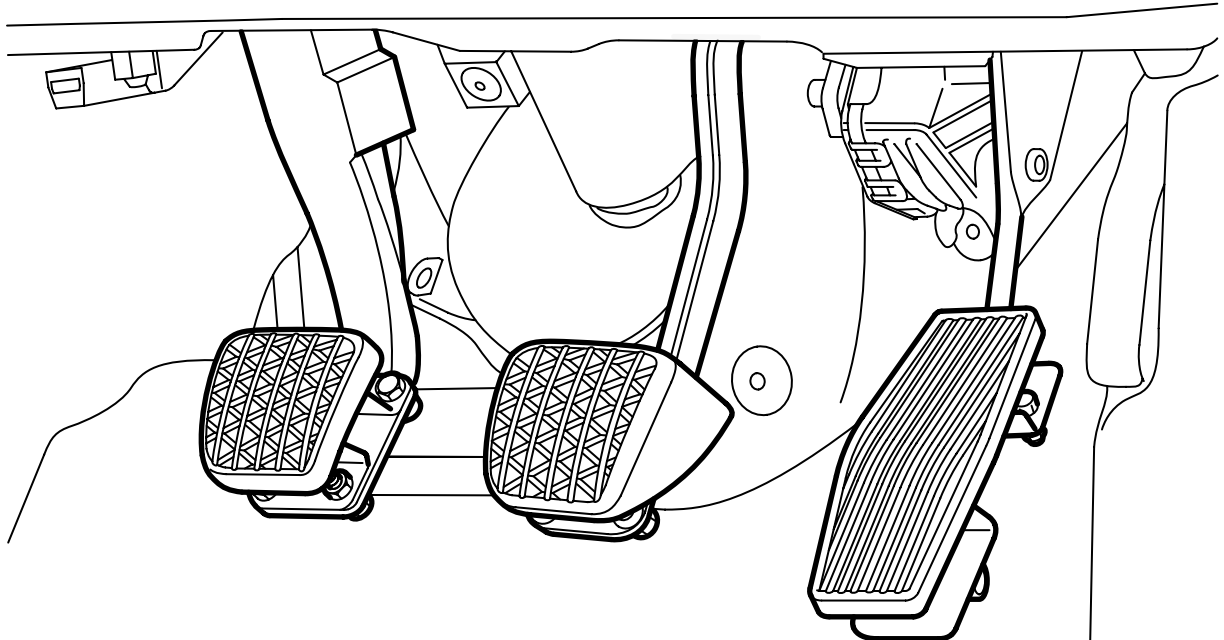

F980A014

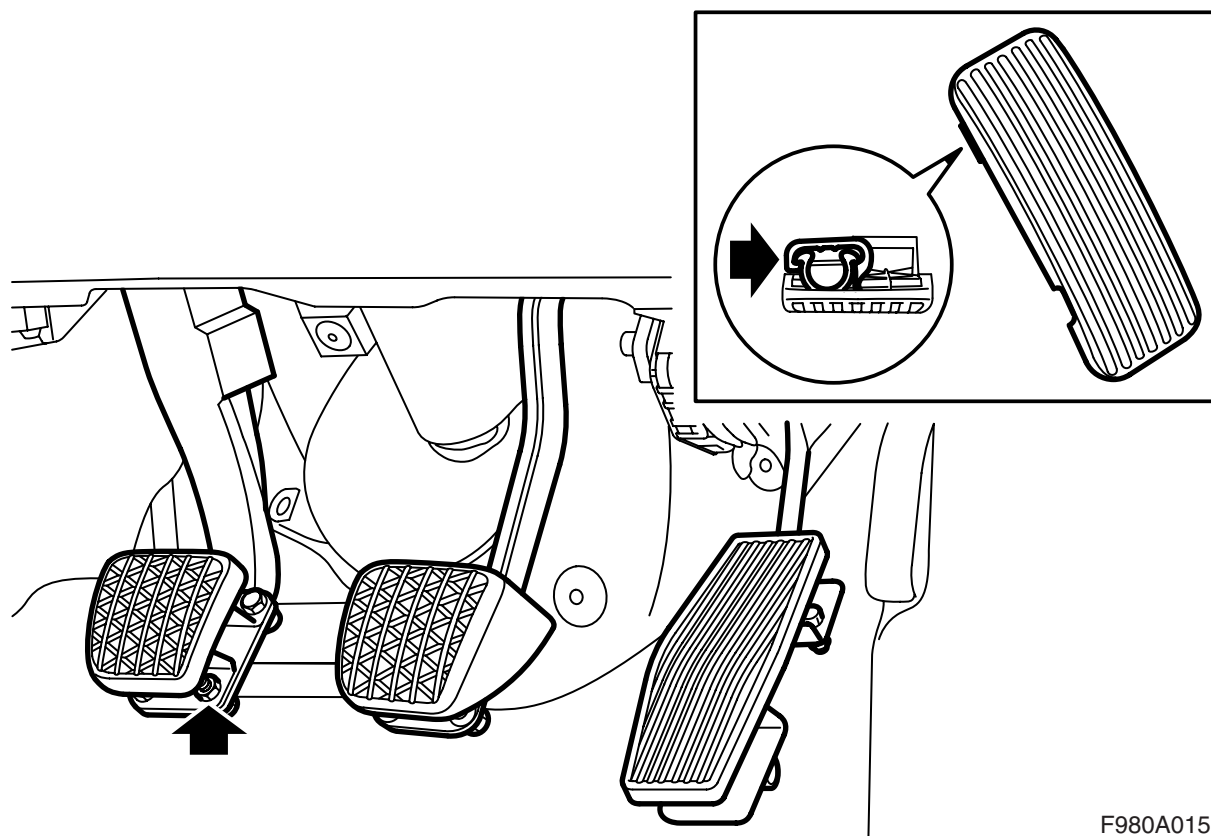

F980A015

- 1 Remove the pedal pads from all the pedals

**Accelerator pedal RHD:** Remove the entire pedal plate by releasing the clip and unhooking the pedal plate.

- 2 Cut out the templates and affix them to the pedals, e.g. with adhesive tape.
- 3 Mark the position of the holes on the pedal plates and drill at right angles to each pedal plate. Drill a 3.5 mm hole first and then 7 mm. Deburr the holes.
- 4 Remove the templates and screw on the pedal raising plates with lock nuts and bolts. The bolts must be inserted from above with the nuts underneath the pedal.
 

**Clutch pedal RHD:** The bottom right bolts (see arrow) must be fitted from below.

**Accelerator pedal RHD:** Fit the accelerator pedal by hooking on the bottom edge and then screwing on the clip.

**Tightening torque 9.5 Nm (7 lbf ft)**
- 5 Fit all pedal pads.
- 6 Vacuum the area around and under the pedals.