




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**


Saab 9-3 CV M04-

Wind deflector

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
12 831 370 32 026 001	9:84-26	Feb 07	12 833 880	12 833 880 Jun 04

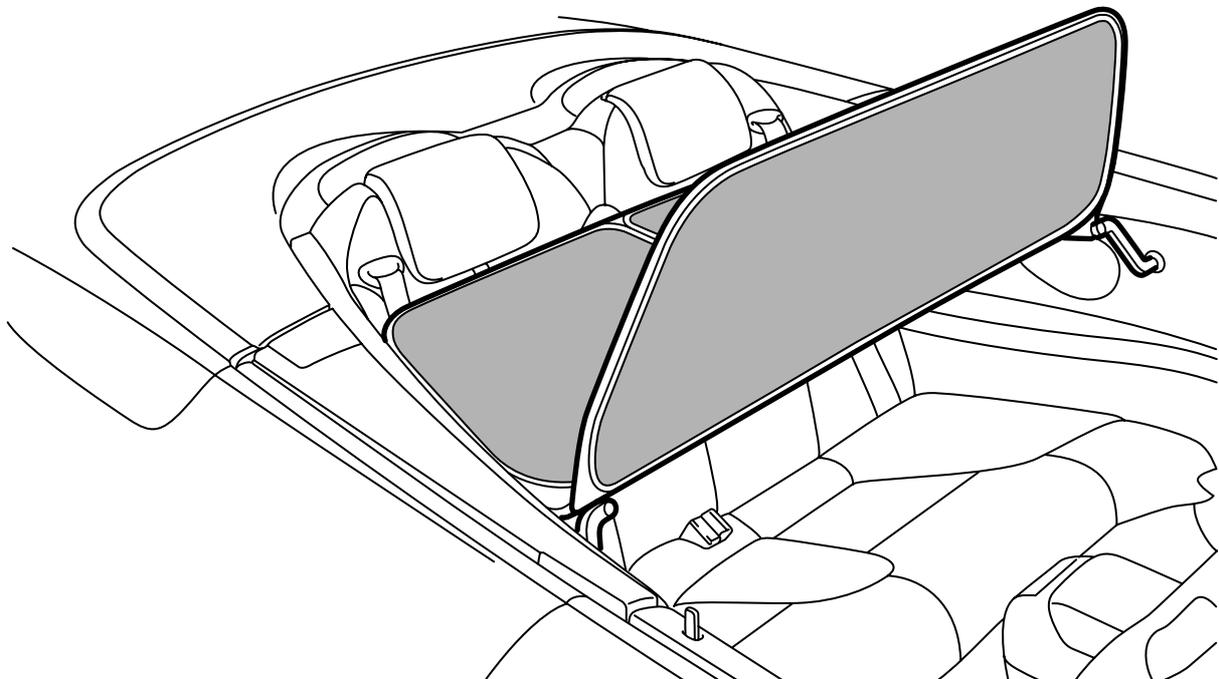

F980A338

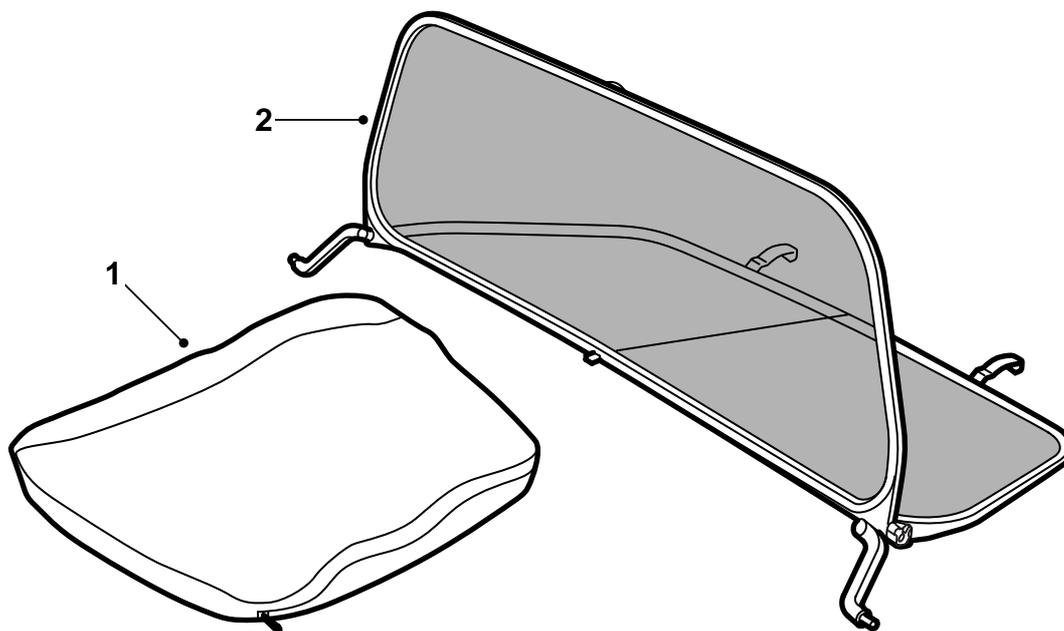

F980A339


1 Bag

2 Wind deflector

Fitting, see page 3

To remove, see page 5

To clean, see page 6

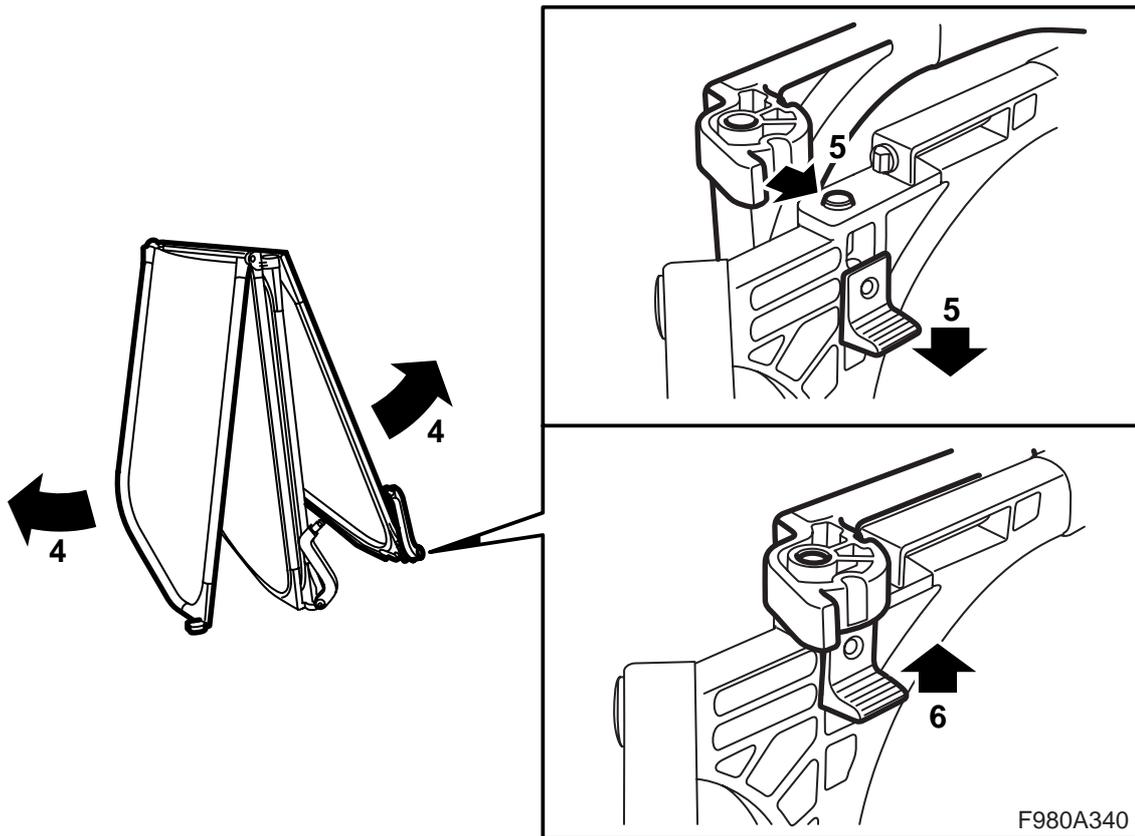





Fitting

- 1 Pull up the rear head restraints to the top position.
- 2 Fold the front seat backrests forward and move the seats to their front positions.
- 3 Take the wind deflector out from the storage bag.
- 4 Fold out the top and bottom frames of the wind deflector.

Important

The top and bottom frames are folded out in their separate directions.

- 5 Press in the pin towards the spring and push the frame's top and bottom sections together.
- 6 Carefully release the pin so that it enters the hole. Check that the frame sections are held together.

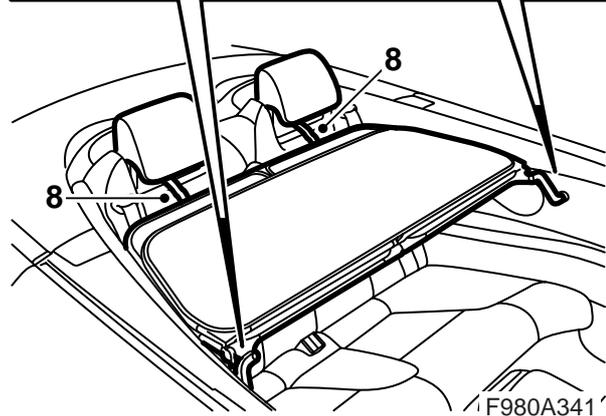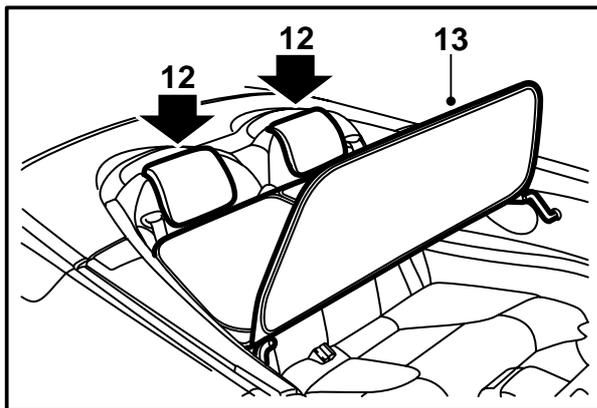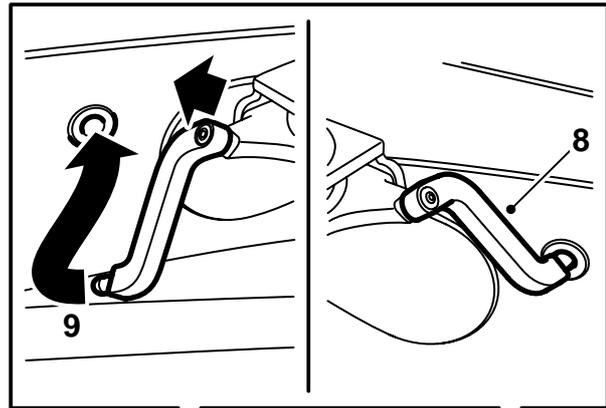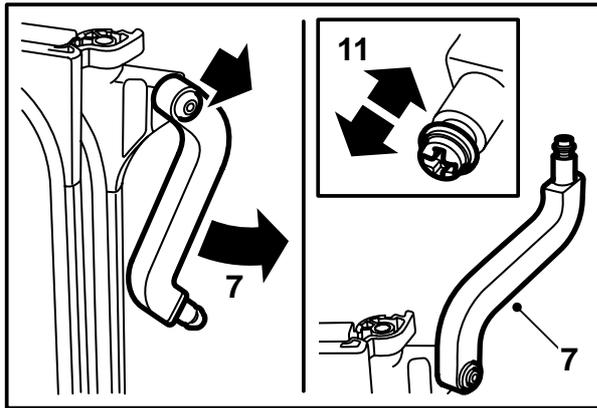

- 7 Fold out one stay by pulling it out and then turning it. Use the screw as a thumb rest when turning in order to release the stay from the locked position.
- 8 Fit the unfolded stay in the side trim hole and slide the rear holder of the wind deflector in to the rear seat backrest.
- 9 Fold out the other stay by pulling it out and then turning and fitting it into the side trim hole in the same way as the first one.
- 10 Check that the stays are properly engaged in the side trims and that they are locked in position.
- 11 Check that there is no play in the front side trim attachment points for the wind deflector. Adjust if necessary with the two screws in the ends of the stays.
- 12 Press down both of the rear head restraints to their bottom position.


- 13 Fold up the top frame so that it engages in the end position. Move the front seats to the correct position.

Important

Do **not** adjust the front seat backrests backward so far that they are in contact with the wind deflector.




Important

The head restraints must be in the bottom position when the wind deflector is used as the head restraints secure the wind deflector rear attachments.

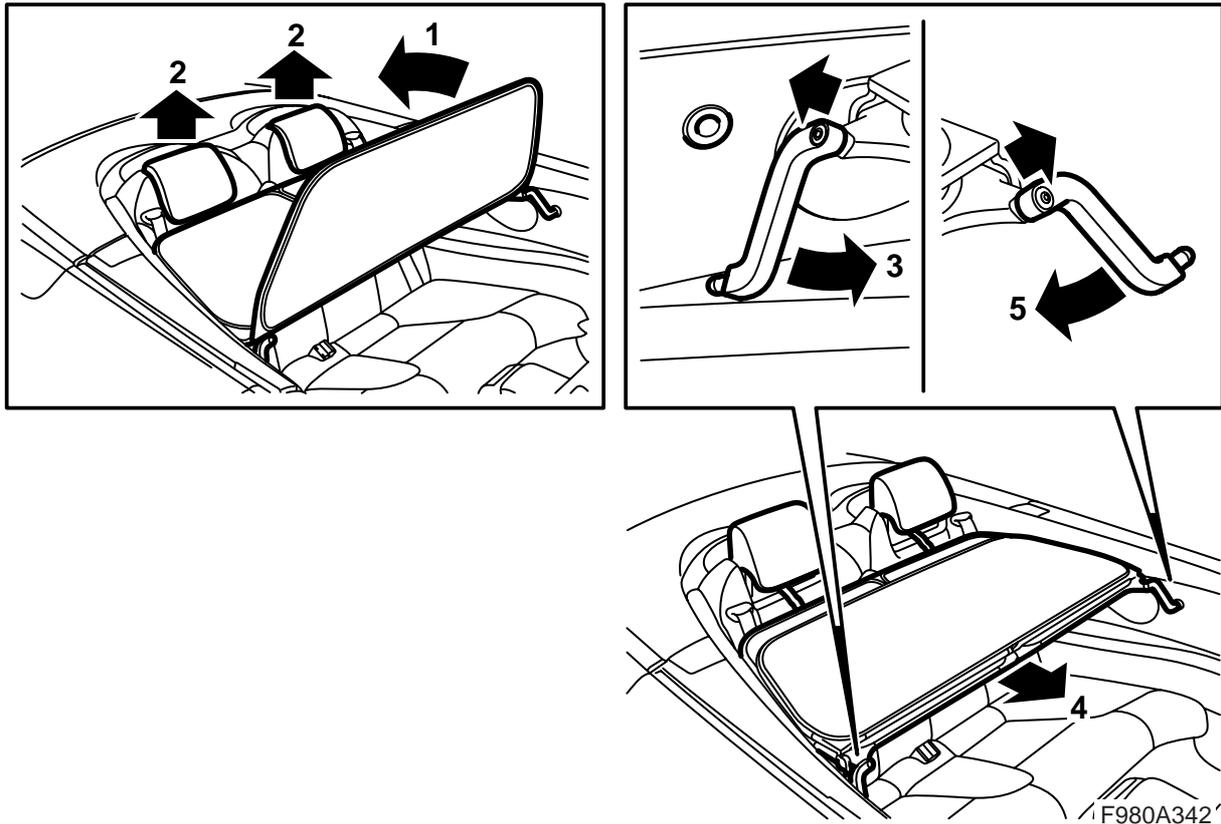

To remove

- 1 Fold down the wind deflector's top frame.
- 2 Pull up the rear head restraints to the top position.
- 3 Fold in one wind deflector stay by pulling it out and then turning it. Use the screw as a thumb rest when turning in order to release the stay from the locked position.
- 4 Pull the wind deflector forward from the rear seat head restraints, unhook the other stay and lift the wind deflector from the car.
- 5 Fold in the other stay by pulling it out and turning it in the same way as the first stay.

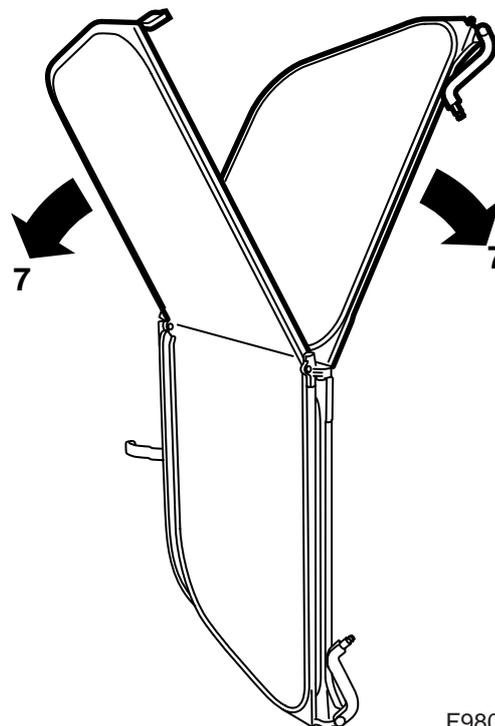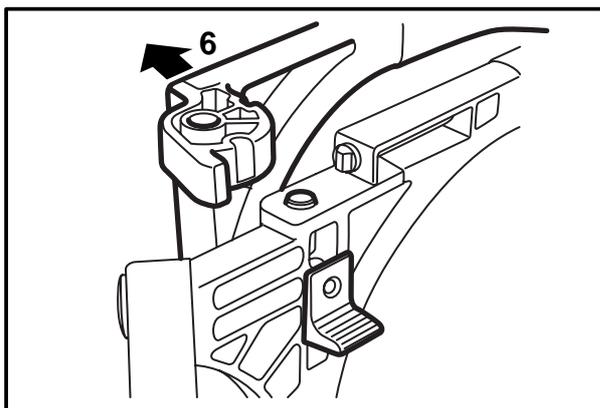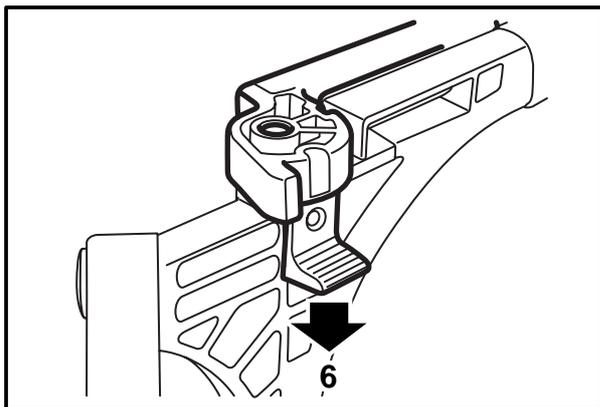

F980A343

- 6 Press in the pin towards the spring and push the frame's top and bottom sections together.
- 7 Fold the top and bottom frames of the wind deflector together.
- 8 Guide the wind deflector into the storage bag.

Important

Always store the wind deflector in the bag when it is not in use.

To clean

Use a linen cloth and a soap solution. Press carefully on the perforated plastic wrap.

Important

Never use benzine or other solvents.
