




SAAB

**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**

Saab 9-5


Wiring harness, 7-core

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 106 274	3:71-21	June 98	48 05 081	48 05 081 Sep 96

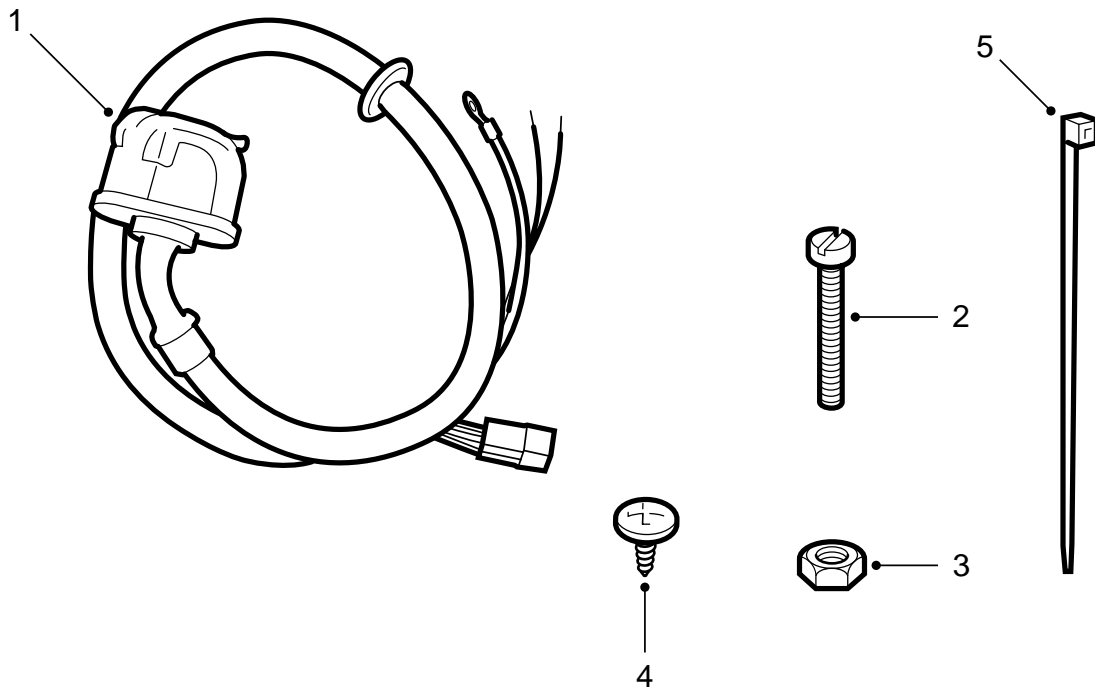

E371A001


- 1 Trailer connector, 7-pin
- 2 Screw (3)
- 3 Nut (3)
- 4 Self-tapping screw
- 5 Cable tie (3)

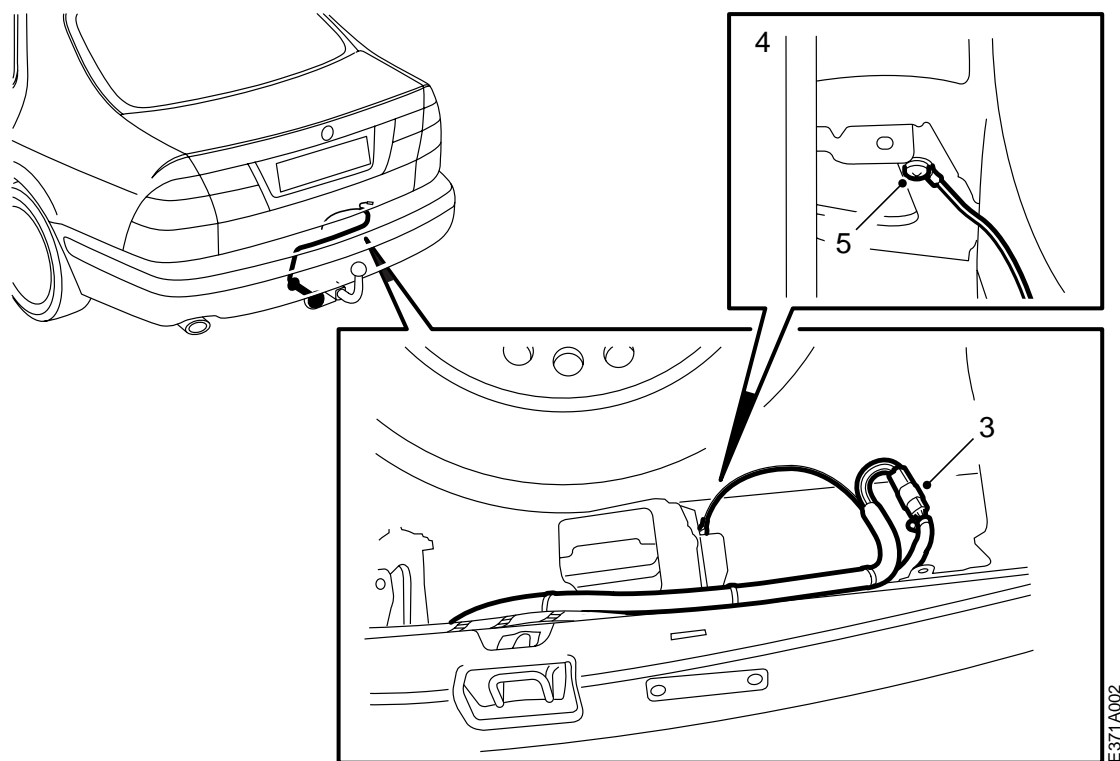

E371A002


Starting point: rear bumper removed.

- 1 Remove the rubber plug from the rear bumper abutment.
- 2 Run the kit's wiring harness into the luggage compartment.
- 3 Connect the towing hitch wiring harness to the pre-installed towing hitch wiring in the car.
- 4 Use a 5.0 mm diam. bit to drill a hole in the righthand reinforcement plate, as shown.
- 5 Scrape away the paint from around the drill hole and screw on the ground cable on the wiring harness with a plate screw.
- 6 Check the function of the outlet, see wiring diagram.

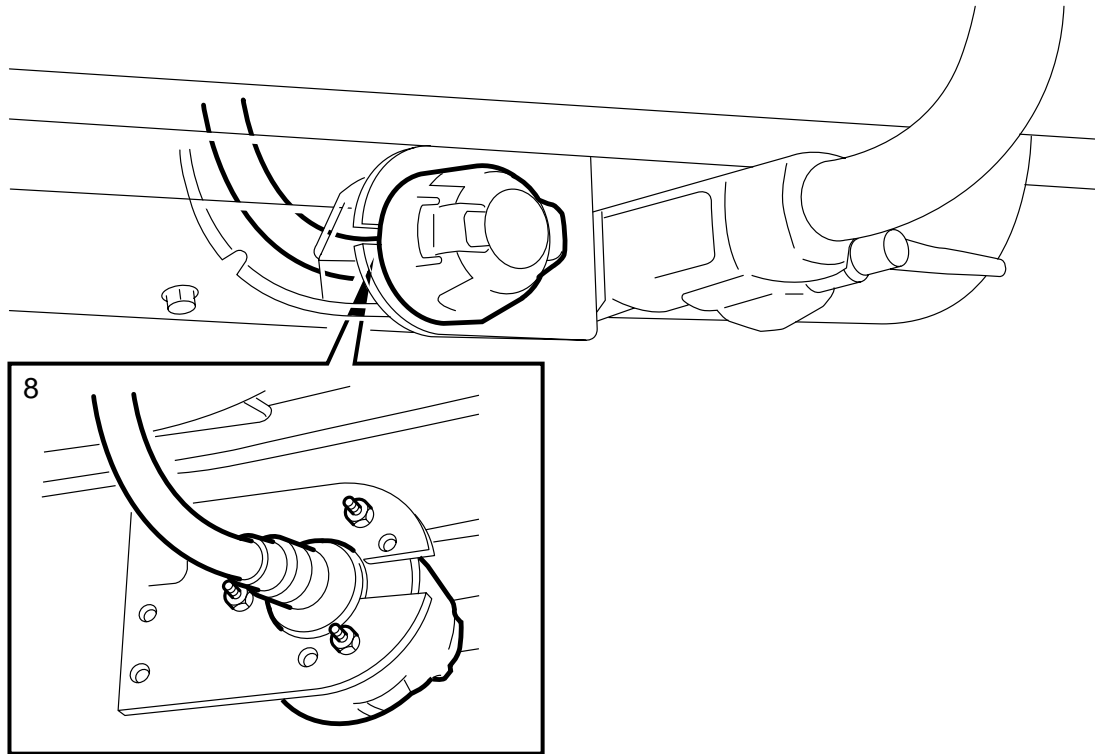

E371A008

- 7 Fit the trailer connector (see separate fitting instructions) and the bumper.
- 8 Mount the connector on the bracket so that the cover opens to the left.
- 9 Adjust the wiring harness between the connector and the rear bumper abutment.
- 10 Fit the wiring harness's rubber grommet in the rear bumper abutment's lead-through hole.
- 11 Use the cable ties to secure the wiring harness.

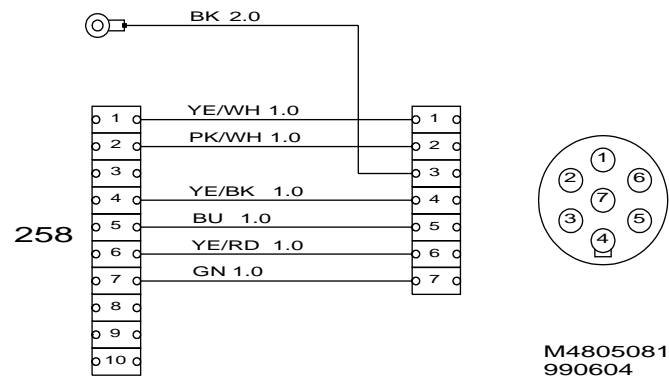

Wiring diagram

The table refers to the 7-pin connector for the towing hitch.

- 1 Left-hand direction indicator
- 2 Rear fog light (on/off)
- 3 Ground
- 4 Right-hand direction indicators
- 5 Right-hand rear light
- 6 Brake lights
- 7 Left-hand rear light