




SAAB

**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**


Saab 9-5

Pedal raising kit

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 110 151 400 110 144 400 110 169	5:24-4	Feb 98	50 55 751	

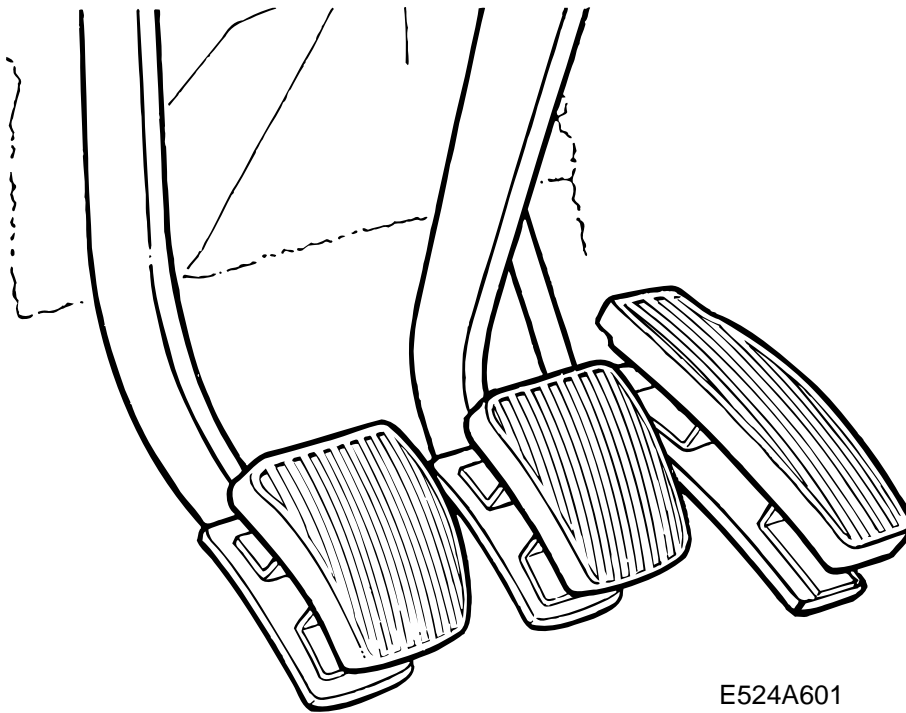

E524A601

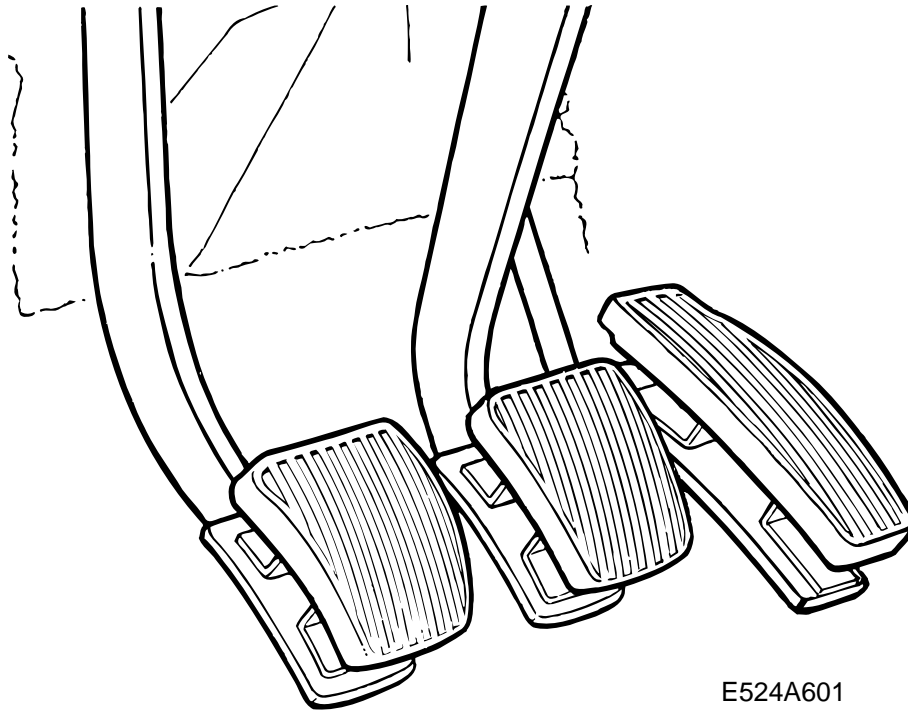


- 1 Remove the pedal pads from the pedals.
- 2 Use the hole-drilling templates supplied with the raising kit and fasten them to the pedals with a piece of adhesive tape, for instance. Mark the positions of the holes and drill the holes at right angles to the pedal plate. Drill first with a 3.5 mm diameter bit and then with a 7 mm diameter bit.
- 3 Fit all pedal pads.
- 4 Secure the pedal plate in place by means of the M6 bolts and locknuts.

Tightening torque: 9.5 Nm (7 lbf ft)


Note

The bracket holding the throttle pedal plate must be fitted in the right direction. Fit the bracket in the same position as the original pedal plate.

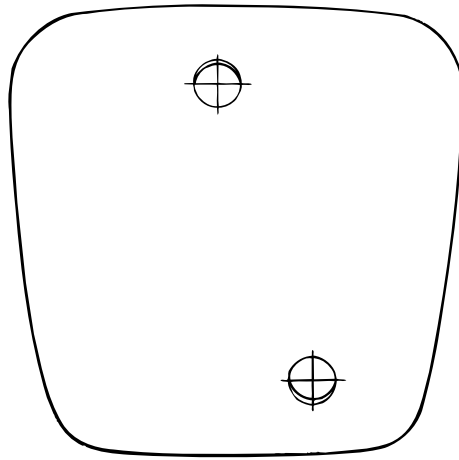
Hole template, clutch pedal LHD

E524A602

Hole template, clutch pedal RHD

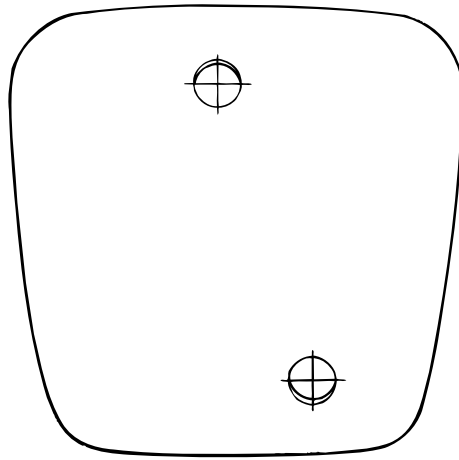


E524A602

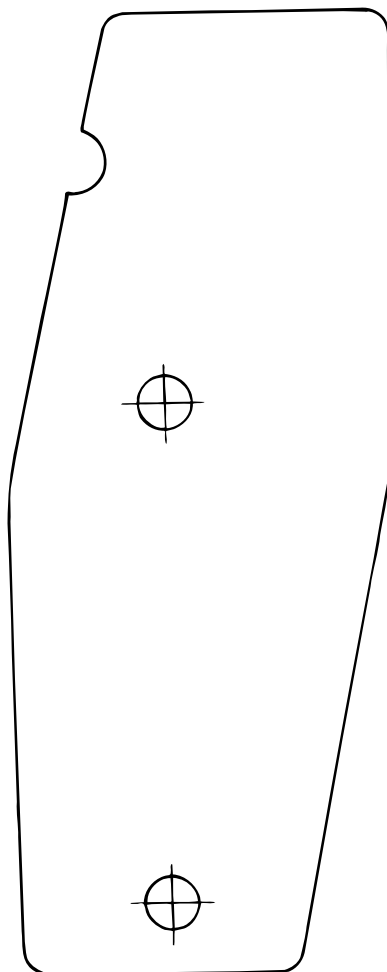Hole template, Throttle pedal (automatic transmission) LHD


E524A604

Hole template, Throttle pedal (manual gearbox) LHD

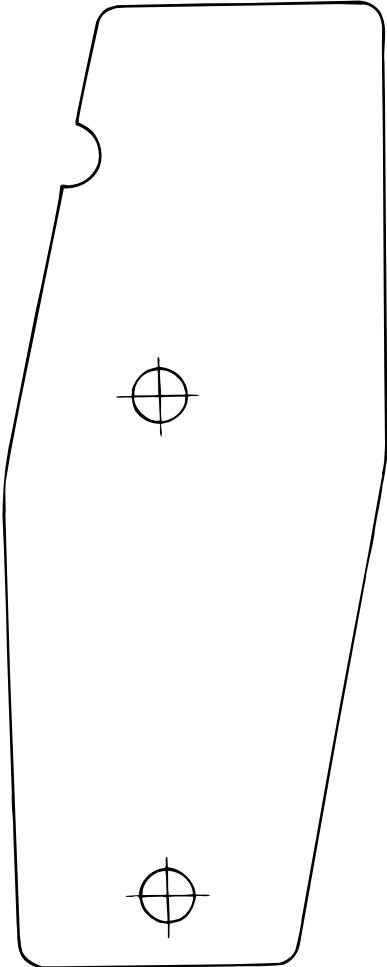


E524A604

Hole template, brake pedal (manual gearbox) LHD

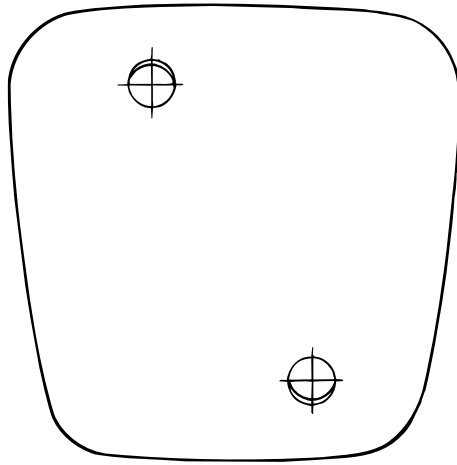

E524A603

Hole template, brake pedal (automatic transmission) LHD

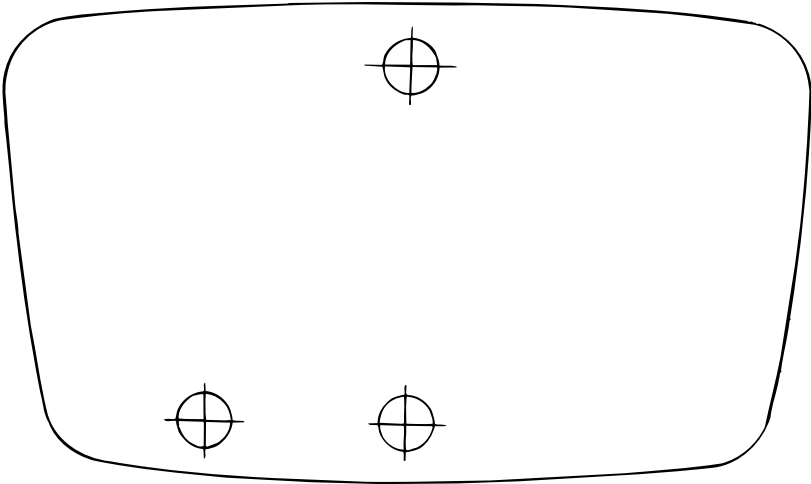

E524A605