




**SAAB**

**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS  
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**


## Saab 9-5

### Pedal raising kit

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 110 151 400 110 144 400 110 169	5:24-4	Feb 98	50 55 751	

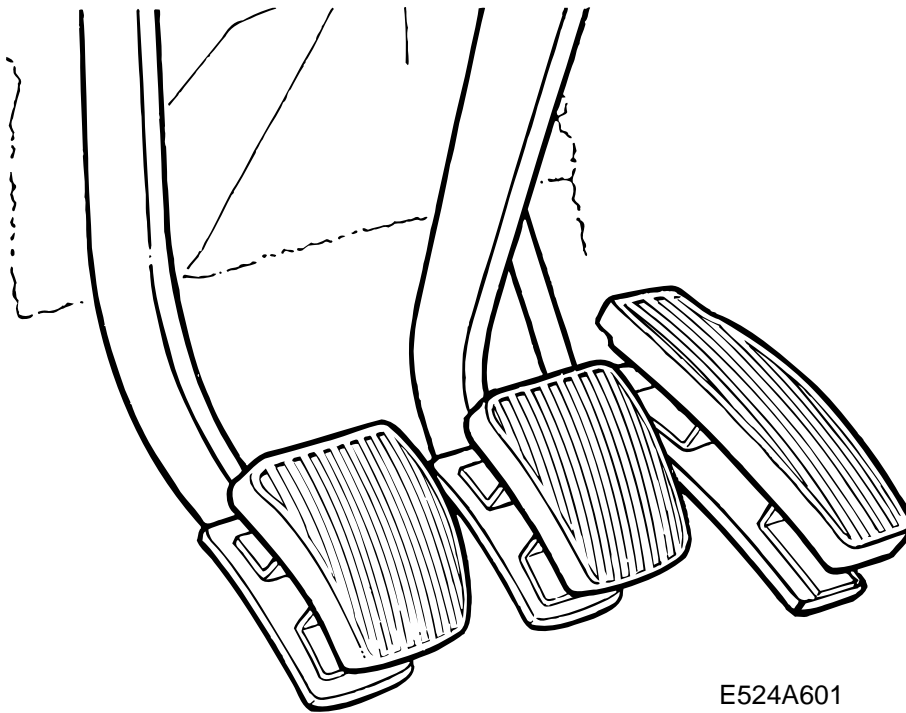

E524A601

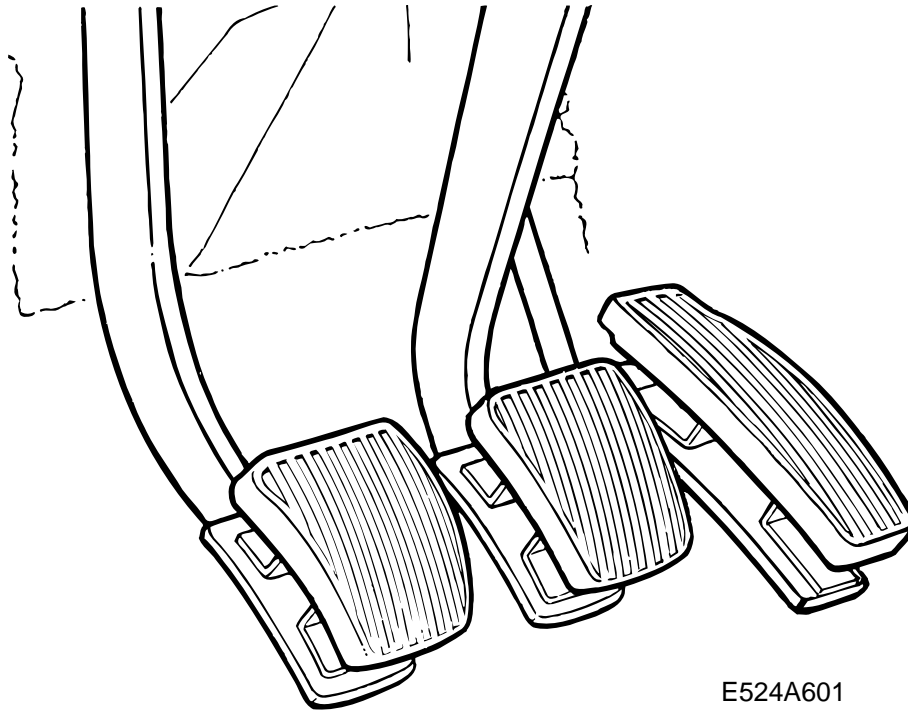

E524A601


- 1 Remove the pedal pads from the pedals.
- 2 Use the hole-drilling templates supplied with the raising kit and fasten them to the pedals with a piece of adhesive tape, for instance. Mark the positions of the holes and drill the holes at right angles to the pedal plate. Drill first with a 3.5 mm diameter bit and then with a 7 mm diameter bit.
- 3 Fit all pedal pads.
- 4 Secure the pedal plate in place by means of the M6 bolts and locknuts.

**Tightening torque: 9.5 Nm (7 lbf ft)**

**Note**


The bracket holding the throttle pedal plate must be fitted in the right direction. Fit the bracket in the same position as the original pedal plate.

---

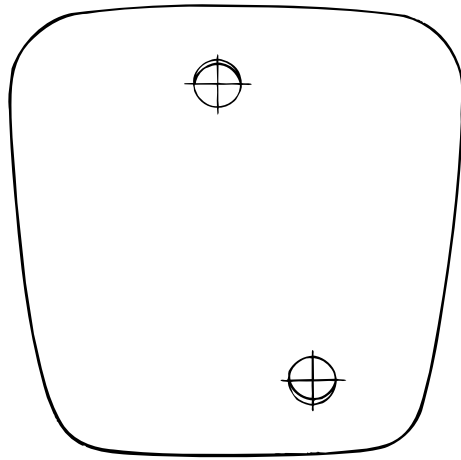**Hole template, clutch pedal LHD**

E524A602


Hole template, clutch pedal RHD

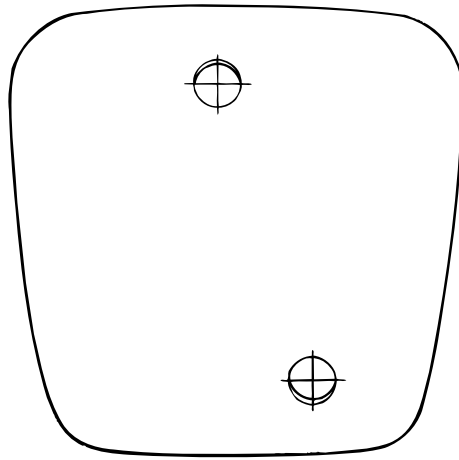

E524A602


---

Hole template, Throttle pedal (automatic transmission) LHD

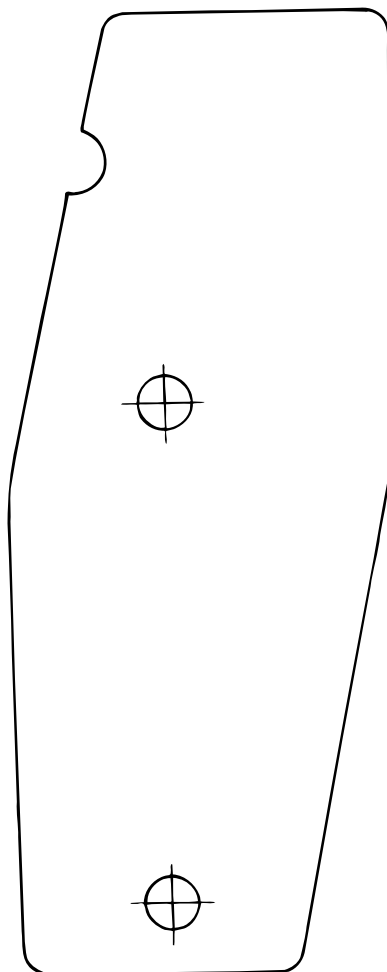

E524A604


Hole template, Throttle pedal (manual gearbox) LHD

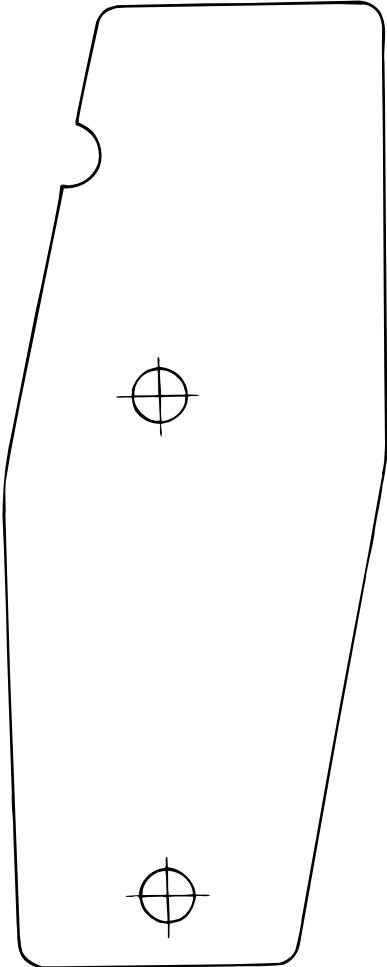

E524A604


---

Hole template, brake pedal (manual gearbox) LHD

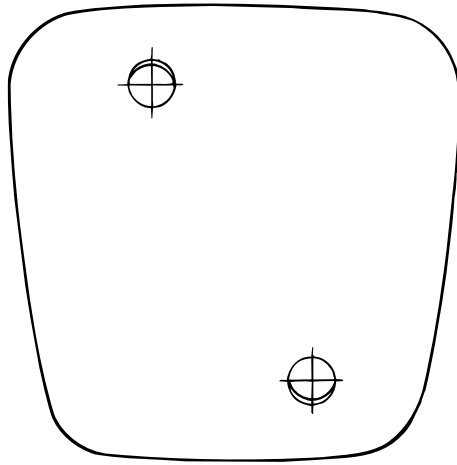

E524A603

Hole template, brake pedal (automatic transmission) LHD

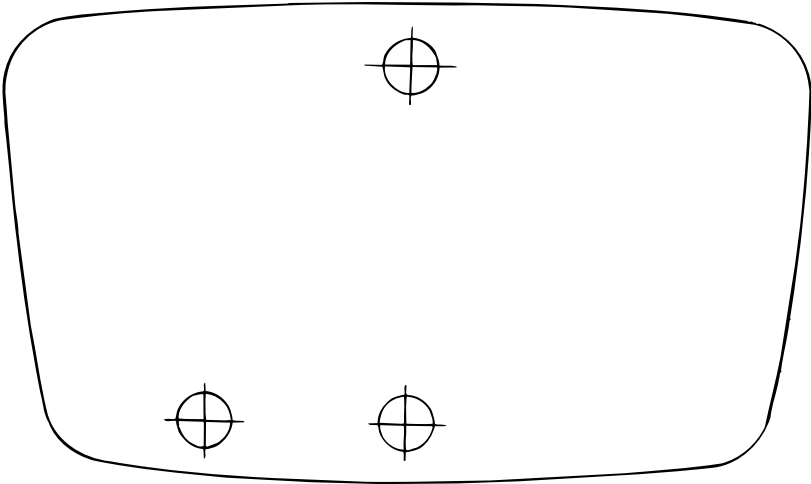

E524A605