




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**

Saab 9-3 (9400) -M03


Kit, rubber mats

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 110 409 (RHD) 400 110 417 (LHD)	8:52-16	Sep 04	47 42 391	47 42 391 Sep 97

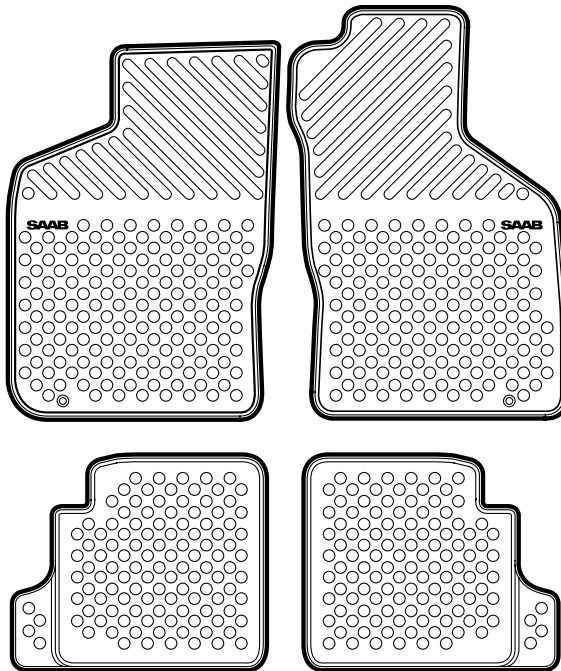

D980A018

Rubber mats

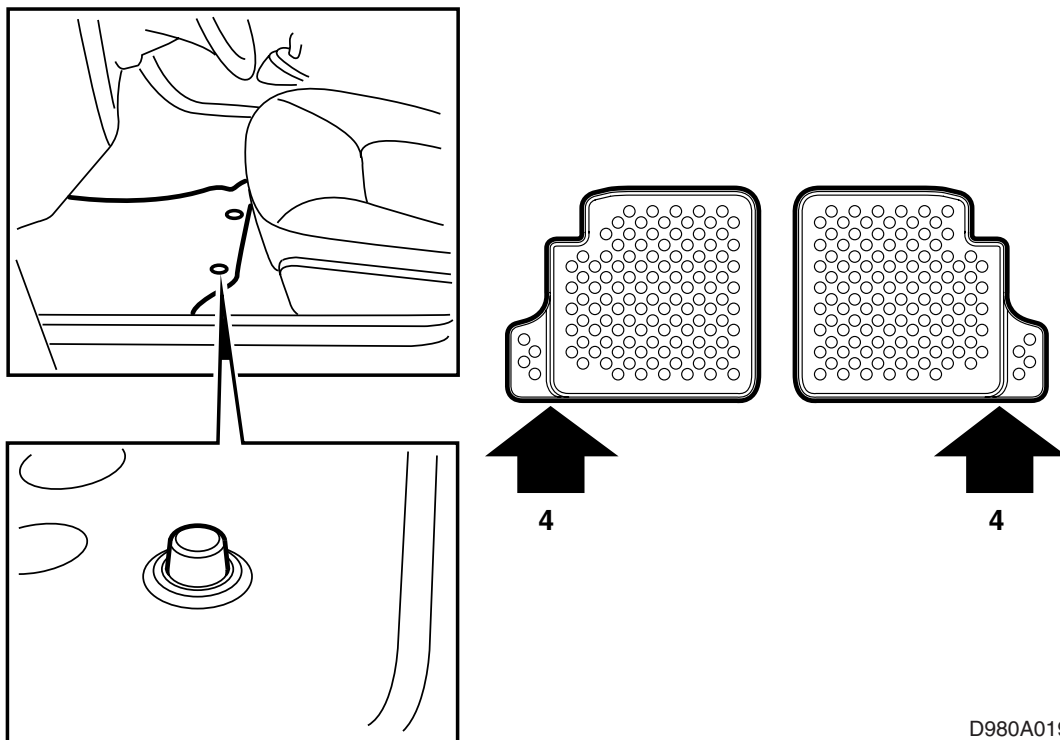

D980A019

- 1 Place the floor mats in the car.
- 2 Secure the front mats with their fasteners.
- 3 Place the fitting instructions inside the car.

⚠ WARNING

Make sure the driver's mat is fastened securely so that it will not slide forwards under the pedals.

- 4 **CV and 3-door cars:** The rear mats must be cut according to the guides on the mat.