




SAAB

**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**




Saab 900 3D/5D M94-, Saab 9-3 3D/5D

Sun blind, rear window

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 112 603	9:85-10	Feb 00	86 90 984	86 90 984 Feb 99

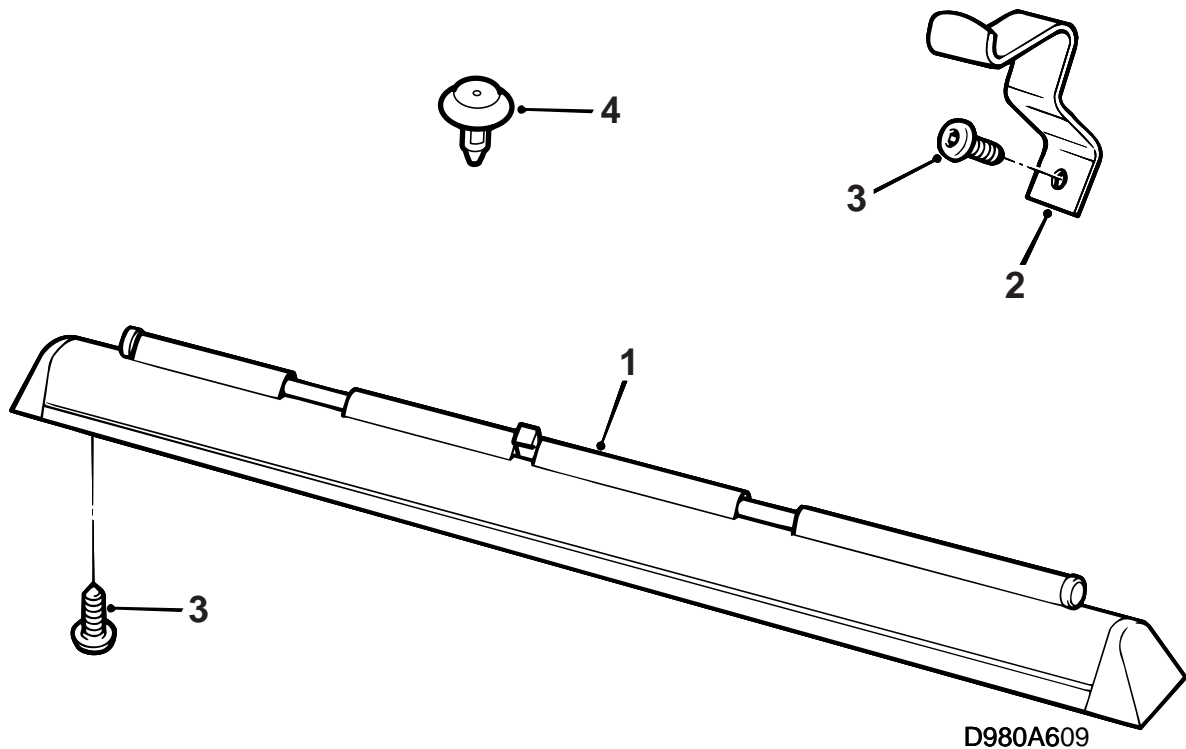

- 1 Sun blind
- 2 Upper brackets (2)
- 3 Screws (4)
- 4 Clip (5)

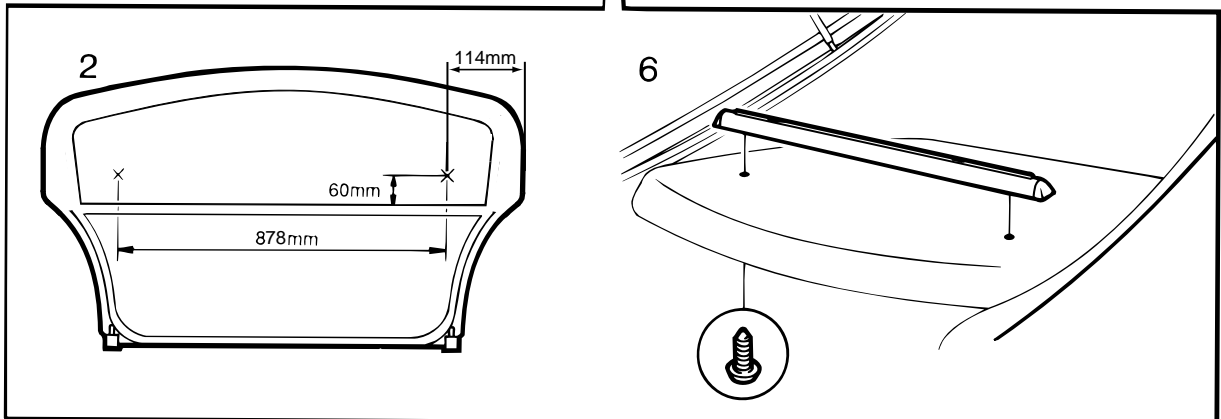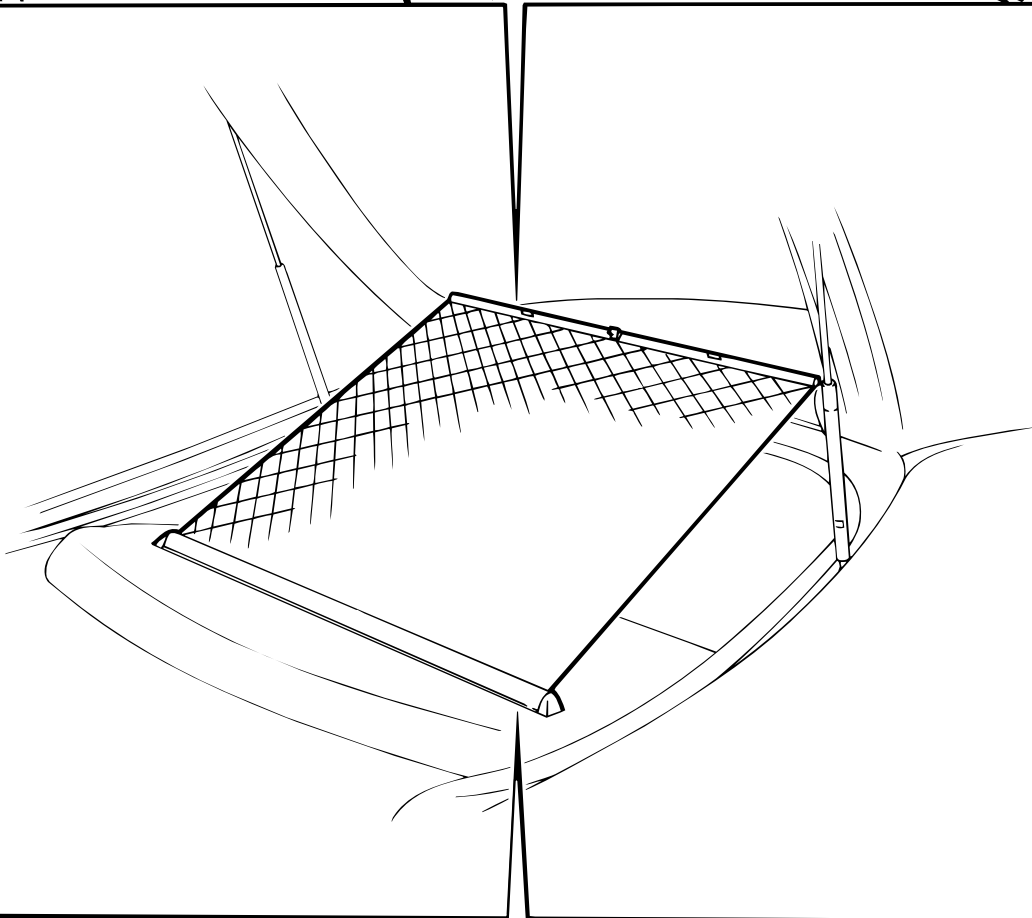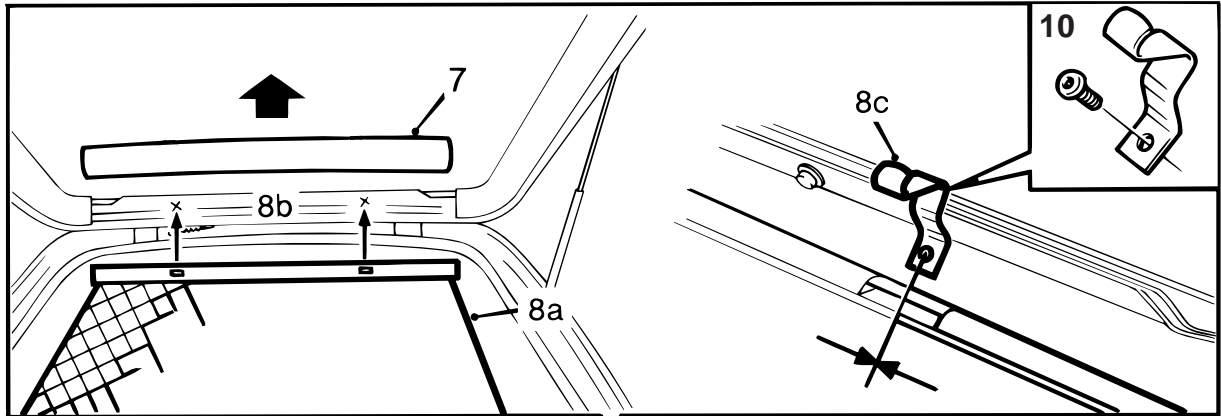

D980A605

- 1 Place a protective cover on a workbench. Lift out the parcel shelf and place it upside down on the workbench.
- 2 Mark the positions of the sun blind's mounting holes according to the measurements shown.
- 3 Drill one of the holes, using a 6 mm bit.
- 4 Fit the sun blind in place on the parcel shelf and check the position of the other hole.
- 5 Remove the sun blind and drill the other hole, using a 6 mm bit.
- 6 Screw the sun blind to the parcel shelf and fit the parcel shelf back in the car.
- 7 Remove the cover at the top of the rear window.
- 8 Mark the positions of the sun blind's upper brackets as follows:
 - a Pull up the sun blind and hold it against the top of the tailgate.
 - b Using a pencil, make a mark on the tailgate midway between the sun blind's attachment points.
 - c Hold one of the upper brackets against the tailgate, two millimetres from the rear window. Centre it sideways, using the pencilled mark as a reference point. Then mark the position of the screw hole for the bracket.
- 9 Drill a hole as marked. Use a 4.5 mm bit.
- 10 Screw the bracket in place.
- 11 Pull the sun blind up and attach it to the bracket.
- 12 Hold the other upper bracket in position at the top of the tailgate. Attach the sun blind to the bracket, checking that it is straight. Then mark the position of the screw hole for the bracket.
- 13 Drill a hole as marked, using a 4.5 mm bit.
- 14 Paint the hole with primer to prevent corrosion. Use Standox 1K Füllprimer or equivalent product.
- 15 Screw the bracket in place.
- 16 Replace any broken clips with new ones from the kit, and fit the cover above the rear window.