




**MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTRUCTIONS DE MONTAGE**

Saab 9-3


Caravan rear view mirror

| Accessories Part No. | Group | Date | Instruction Part No. | Replaces |
|----------------------|---------|--------|----------------------|----------|
| 12 788 487 | 9:84-22 | Jun 02 | 12 792 692 | |

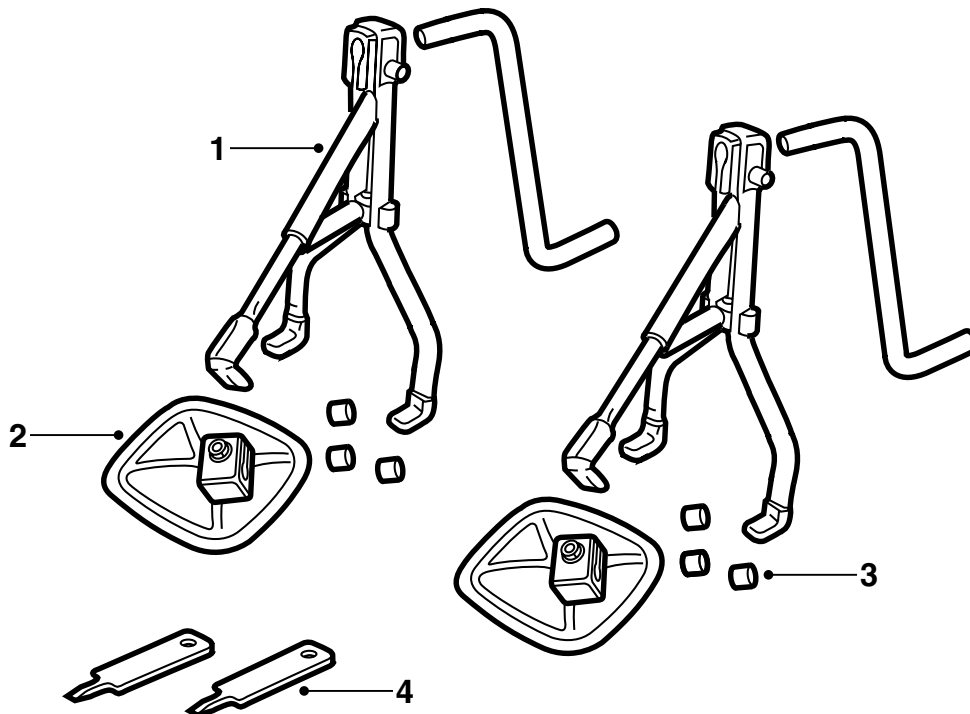

D980A111

- 1 Arm with bracket (x2)
- 2 Rear view mirror housing (x2)
- 3 Protective cap (x6)
- 4 Tool (x2)
- 5 Tape (x4)

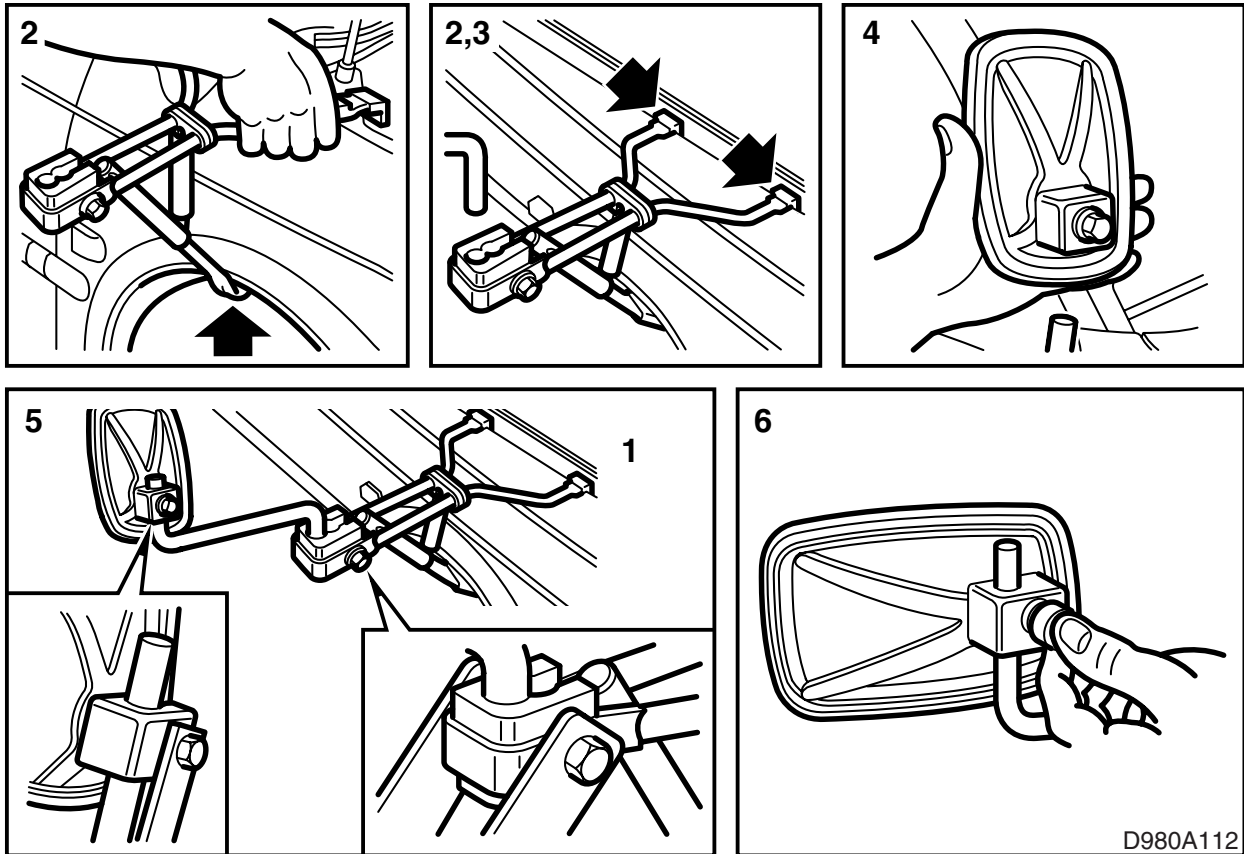

Fitting (first time)

- 1 Open the bonnet.
- 2 First, hook the lower mounting onto the edge of the wheel housing followed by the upper mountings on the edge of the front wing.
- 3 Fit the arm for the rear view mirror housing.
- 4 Fit the rear view mirror housing.
- 5 Adjust the rear view mirror housing and arm and tighten the bolts.
- 6 Fit the protective caps.
- 7 Carefully lower the bonnet without engaging the catch.
- 8 Place the bits of tape on the bonnet so that they are near the upper caravan rear view mirror mountings and protect the bonnet from any possible damage caused by the mirror mountings.
- 9 Clean the bonnet and place the bits of tape so that the upper edges are exactly aligned with the upper edge of the bonnet. Press out any air bubbles.

Fitting the rear view mirrors

Open the bonnet. First, hook the lower mounting onto the edge of the wheel housing followed by the upper mountings on the edge of the front wing. Close the bonnet.

Removing the rear view mirrors

Open the bonnet. First, unhook the upper mountings followed the lower mounting. Close the bonnet.